


MEDICAL SYSTEMS

The Accu-Cut 700L uses ASG's proprietary cutting technology to provide clean, square cuts on tough, difficult to cut materials including:

- Metal Braided Tubing and Catheters
- Stainless Steel Tubing
- Polycarbonate and Nylon 12 Tubing and Rod

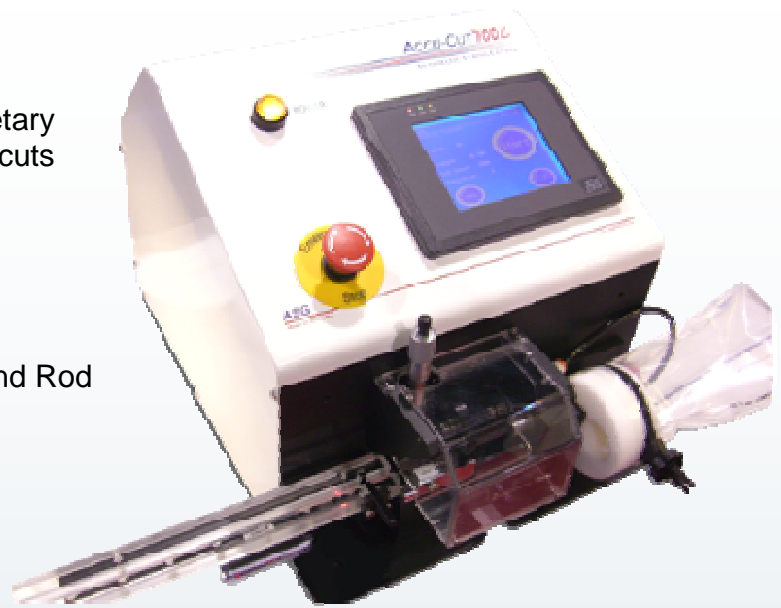

PRODUCTIVITY and FLEXIBILITY

- 1 minute setup and changeover
- Long blade life, low blade cost, easy blade change
- Pair with Accu-Feed for fully automated bin-to-bin processing

SPECIFICATIONS

- **Speed** – 40 to 115 cm/sec
- **Rate** – increased to 200-1200 parts per hour (length and process dependent)
- **Diameter** – .025"OD to .20"OD
- **Length** – 0.5-200cm or more (please specify maximum part length)
- **Accuracy** – 0.2mm on short cuts, +/- .025% on long cuts

The 700L is fully automatic, does not require a mandrel in the part, and cuts extremely precise lengths thanks to its encoder based indexing system. It also offers very low blade cost.

The Accu-Cut 700L is the answer for precise, burr free cutting on difficult materials.

Contact ASG Medical Systems for additional information