


MEDICAL SYSTEMS

The **Accu-Trim 70m** was designed to bring safe, ergonomic and precise braided tube cutting to lower volume production areas that are not ready for high speed automated equipment. Designed to be cost effective for production volumes up to 200 catheters per day, the Accu-Trim will improve your yield and productivity while bringing safety and confidence to your production area.

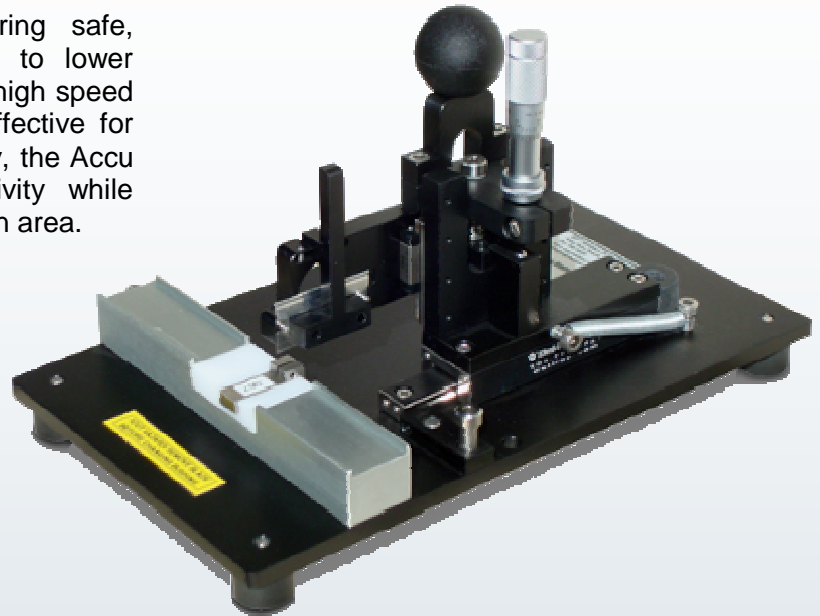

FEATURES:

- No more slipped blades, ruined cuts or bloody fingers
- Burr-free, square precision cuts on braided tubing
- Precision length measurement
- Precision blade depth control
- Smooth, accurate blade movement
- Controlled blade travel for each cut, assuring only virgin blade edge on product
- 2X blade life compared to manual cutting (two cuts per part)
- Rapid, tool free blade change
- Uses inexpensive standard razor blades
- New air powered blade feed (not shown) improves yield by controlling cut force

DIMENSIONS

- 6" x 9" base
- 72" track on left side

SPECIFICATIONS

- Catheter cut length – up to 72 inches
- Diameter – .025 to .200
- Requires removable mandrel (one supplied)

Contact ASG Medical Systems for additional information